

U.P.2**RETRACT VALVE WITH AUTOMATIC DOOR CONTROL**
(DOORS CLOSED WHEN DOWN)**SPECIFICATION**

SINGLE SPEED CONTROL FOR LEGS

3 - 10 SECONDS RECOMMENDED

DUAL SPEED CONTROL FOR DOORS

0.5 - 3 SECONDS RECOMMENDED

SINGLE AIR INLET

30 - 200 POUNDS

FOUR OUTLETS FOR LEGS

FOUR OUTLETS FOR DOOR CYLINDERS

STANDARD SERVO ACTUATION

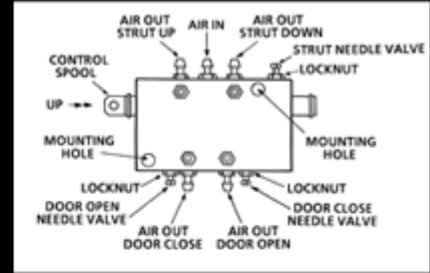
0.3 INCHES TRAVEL. SPECIAL SLOW
SERVO IS NOT REQUIRED.

SIZE

1.94 x 1.18 x .62 INCHES

WEIGHT

2.3 OZ.

**SEQUENCE OF OPERATION****STRUT IN THE UP POSITION.**

DOWN SELECTED - SERVO MOVES SPOOL

DOOR OPENS

RETRACT LOWERS

LEG LOCKED DOWN

DOOR CLOSES

STRUT IN THE DOWN POSITION.

UP SELECTED - SERVO MOVES SPOOL

DOOR OPENS

LEG RAISES

LEG LOCKED UP

DOOR CLOSES

